

SkuttleTight™

All-In-One Attic Entry System!!

Installation Instructions

1



Decide on a location where there will be sufficient head room above

5



Install drywall and cut opening

2



Frame rough opening to 22 1/2" X 30"

6



Remove Skuttle door from frame and slide frame into rough opening Note: It is easier to place door in attic prior to installing frame

3



Make sure the opening is square

7



"Tack" nail frame in place with drywall nails

4



Install vapor barrier and seal to the framing

8



Check frame for square

Installation Instructions

9



Install 2 1/2" drywall screws through predrilled holes.
Note: Do not over tighten & shim as needed

13




Tape and drywall compound ceiling as normal.

10



Slide door down into frame from attic

14

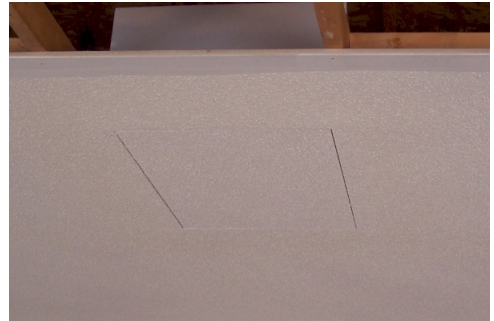

Texture the door and frame the same as you would the ceiling. Make sure to remove any dust from door prior.

11



Check for even reveals around door and that when the screws were installed the side walls didn't bow

15

Install a bead of high quality latex caulking between the frame and 2x framing on the attic side.

16

Install a piece of 3-1/2" fiberglass insulation over the foam block in the attic.

12



Install drywall nails in flange 6" apart



Option: if installing in existing homes you can install optional molding over nailing fin